

READ BEFORE FLIGHT



Powering and Wiring— Important Safety Notes



For powering and wiring the JENESys[®] Edge[™] 534, Onyxx[®] XM 34IO and Onyxx[®] XM 34IO-B devices, please carefully read and follow the instructions in the **INSTALLATION GUIDE** and **WIRING INSTALLATION GUIDE** at:

<http://www.lynxspring.com/technology/jenesys-edge>

<http://www.lynxspring.com/technology/onyxx>

Please also view and refer to each of the four “**How To**” videos available at:

<http://resources.lynxspring.com/index.php/how-to-videos>

Following those instructions will help prevent device issues, ensure safety and guarantee the optimal operation of your device(s).

Note 1: Power supply is to be dedicated to power JENESys Edge 534, Onyxx XM 34IO and Onyxx XM 34IO-B devices. **DO NOT connect other equipment to this dedicated power supply.**

Note 2: Do not apply 24 Vac power (*reinsert connector plug into the JENESys Edge 534, Onyxx XM 34IO or Onyxx 34IO-B*) until all other wiring is completed, including JENESys Edge 534, Onyxx XM 34IO, or Onyxx XM 34IO-B inputs and outputs.

Note 3: Screw down all connector screws prior to testing & installation.

