

Onyxx® BACnet® to Haystack Data Pump INSTALLATION GUIDE

Onyxx-BH311

Estimated installation time: 5-10 minutes

Package Contents:

- ✓ One Onyxx BACnet to Haystack Data Pump
- ✓ One 7ft Ethernet Cable
- ✓ One AC Power Adaptor
- ✓ One Onyxx Data Pump Installation Guide (*this document*)
- ✓ One 3-Position, Screw Terminal Connector
- ✓ One 3-Position, Blank Terminal Connector



Onyxx BACnet to Haystack
Data Pump



Ethernet Cable

Power Adaptor

Preparing to Install the Onyxx Data Pump

Decide where you want to place the Onyxx BACnet to Haystack Data Pump. You can use wall mounting screws (*not provided*) to mount the Onyxx Data Pump in an open space or mount on a 35mm wide DIN rail utilizing the molded DIN rail slot located on the base of the Onyxx Data Pump.

Make sure the selected location is:

- ✓ Not in direct sunlight or near a heater or heating vent.
- ✓ Not cluttered or crowded. There should be at least 4 to 6 inches (*10-15 cm*) of clear space on the side where all of the network and power connections are made.
- ✓ Well ventilated (*especially if enclosed in a cabinet*).

Connecting to the Onyxx Data Pump

A 10/100-Mbit Ethernet connection is provided on the Onyxx BACnet to Haystack Data Pump. This is an RJ-45 port. Use a standard Ethernet patch cable for connecting to an Ethernet hub or switch or for connecting directly to your computer. The RJ-45 port has two LEDs. When the device is connected to a network, the amber **LINK** LED is lit and the green **ACTIVITY** LED flashes when activity occurs.

Step 1: Connect one end of the Ethernet cable to your Onyxx Data Pump's RJ-45 port and the other end to the Internet port on your computer.


Step 2: Connect the power adaptor to the Onyxx Data Pump and then plug it into an outlet. Wait for the power LED and heartbeat LED to turn on. If none of the LEDs turn on, make sure the barrel connector on the end of the power adaptor is pressed firmly into the Onyxx Data Pump.

Step 3: Temporarily change your computer's network settings so your IP address is set to: **192.168.1.XXX** (*where .XXX is anything but .101*). Make note of your computer's current network settings.

Step 4: Open your preferred Internet browser and enter the Onyxx Data Pump's IP address (*factory default is 192.168.1.101*) in the address bar. The Onyxx Data Pump's home page will be displayed.

Step 5: Refer to the Onyxx Data Pump's **USER GUIDE** for detailed instructions on how to configure the TCP/IP, BACnet and Haystack networks.

Step 6: Once you have completed setting up the Onyxx Data Pump's network settings, unplug the end of the Ethernet cable from your computer's Internet port and connect to the network infrastructure.

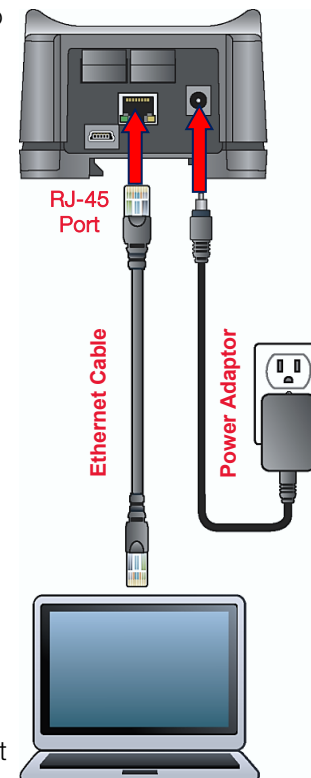

Connecting RS-485 Network to Onyxx Data Pump

The RS-485 port uses a 3-position, screw terminal connector. The screw terminals (*from left-to-right*) are Shield, minus (-), and positive (+). The transmit (Tx) and receive (Rx) LEDs located on the Onyxx BACnet to Haystack Data Pump cover will flash when there is network activity detected.

Step 1: Unplug the left, 3-position screw terminal connector from the Onyxx Data Pump.


Step 2: Insert the positive wire from your RS-485 network to the positive terminal (*far right terminal*) on the 3-position, screw terminal connector and tighten down the screw.

Step 3: Insert the negative wire from your RS-485 network to the negative terminal (*center terminal*) on the 3-position, screw terminal connector and tighten down the screw.

Step 4: Insert the shield wire to the shield terminal (*far left terminal*) on the 3-position, screw terminal connector and tighten down the screw.

Step 5: If located at the end of the network, Lynxpring recommends installation of a 120 ohm end-of-line resistor on the + and - terminals.

Step 6: Plug the 3-position, screw terminal connector back into the RS-485 port on the Onyxx Data Pump.

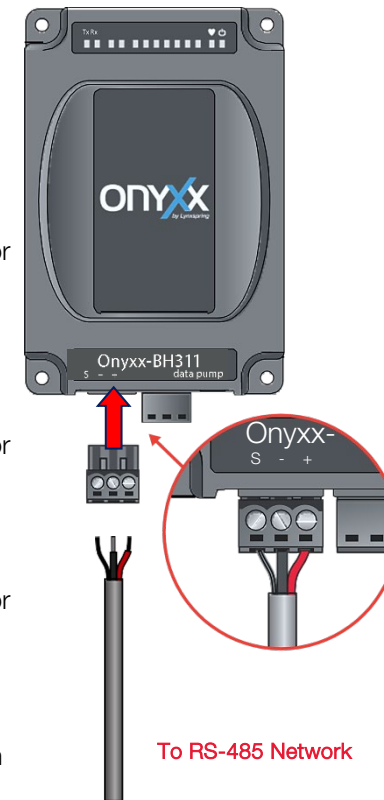

To RS-485 Network

Specifications

PLATFORM	
Operating System	Helixx™ Framework by Lynxspring®
Processor	1 GHz AM335x ARM Cortex A-8
Memory	512 MB DDR3L 800 MHz, 4 GB 8-bit embedded MMC on-board flash
COMMUNICATION PORTS	
Ethernet Port	10/100 Mbps (<i>RJ-45 Connector</i>)
RS-485 Port	Optically-isolated RS-485 serial port with 3-screw connector
Mini-B USB	USB client connector utilizes 5-pin mini-B USB cable
POWER	
Power Input	External 9 to 15 VDC 1A power supply
CHASSIS	
Construction	Base: Plastic, DIN rail or screw mount Cover: Plastic
Cooling	Internal air convection
Dimensions	3.75" (9.53 cm) width x 5.60" (14.22 cm) length X 2.55" (6.48 cm) depth
Mounting	Flat panel and 35mm DIN rail mounting options standard
ENVIRONMENT	
Operating Temperature Range	0 – 40 °C (32 – 104 °F)
Storage Temperature Range	0 – 70 °C (32 – 158 °F)
Relative Humidity Range	5 – 95% RH, non-condensing
CERTIFICATIONS	
Compliance	FCC Part 15 Class A, RoHS, CE, CAN ICES-3(A)/NMB-3(A)



Corporate Headquarters
1210 NE Windsor Drive
Lee's Summit, MO 64086
P: 816-347-3500 | F: 816-347-0780

Troubleshooting

If your browser cannot display the web page:

- ✓ Make sure the Onyx Data Pump is fully up and running. Its power LED should turn on and its heartbeat LED should be flashing.
- ✓ Make sure the Ethernet cable is connected firmly to the Ethernet port on the Onyx Data Pump. The LEDs on the Ethernet port will indicate if the Onyx Data Pump is connected to the network. The amber **LINK** LED will indicate that the Onyx Data Pump is connected to a network and the green **ACTIVITY** LED will indicate the Onyx Data Pump is transmitting and receiving on the network.
- ✓ If you are connecting directly from your computer to the Onyx Data Pump, ensure your computer's network settings are set so that your computer's IP address is anything other than the Onyx Data Pump.
- ✓ If you are connecting the Onyx Data Pump through a network, make sure your computer's network setting is set to **DHCP**.
- ✓ Close and re-open the browser to make sure that the browser does not cache the previous page.

Technical Support

Thank you for selecting Lynxspring products. Please contact our Support Team if you have any questions about installing or setting up your Onyx BACnet to Haystack Data Pump (*Onyx-BH311*).

support@lynxspring.com | toll free: 1-877-649-5969

Statement of Conditions

In the interest of improving internal design, operational function, and/or operability, Lynxspring reserves the right to make changes to the product described in this document without notice. Lynxspring does not assume any liability that may occur due to the use or application of the product(s) or circuit layout(s) described herein.

Proper Disposal



■ This symbol was placed in accordance with the European Union Directive 2002/96 on the Waste Electric and Electronic Equipment (*the WEEE Directive*). If disposed of within the European Union, this product should be treated and recycled in accordance with the laws of your jurisdiction implementing the WEEE Directive.

©2019 by Lynxspring, Inc. All rights reserved. The information and/or specifications published here are current as of the date of publication of this document. Lynxspring, Inc. reserves the right to change or modify specifications without prior notice. The latest product specifications can be found by contacting our corporate headquarters in Lee's Summit, Missouri. Products or features contained herein are covered by one or more United States or foreign patents. Other brand and product names are trademarks or registered trademarks of their respective holders. This document may be copied by parties who are authorized to distribute Lynxspring products in connection with distribution of those products, subject to the contracts that authorize such distribution. It may not otherwise, in whole or in part, be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form without prior written consent from Lynxspring, Inc. Complete Confidentiality, Trademark, Copyright and Patent notifications can be found at:

<http://resources.lynxspring.com>.

Lynxspring®, JENEsys® and Onyx® are registered trademarks of Lynxspring, Inc.
JENEsys Edge™ and Helixx™ are trademarks of Lynxspring, Inc.
Niagara Framework® are registered trademarks of Tridium, Inc.

Onyx-BH311-V1 | Revised 1/10/2019